SCOTT RXS40 GB

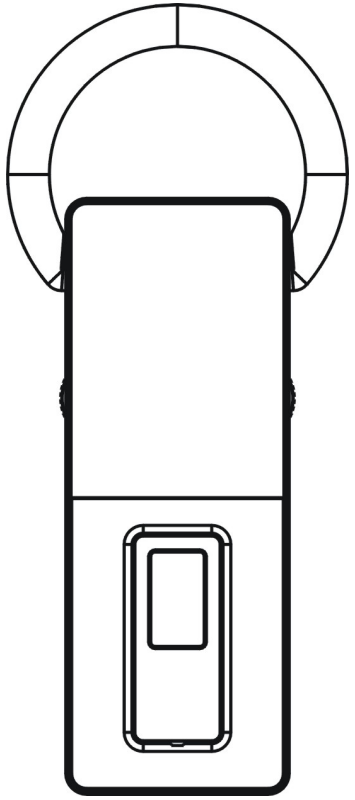

INSTRUCTION MANUAL

CE

MAINTENANCE

Care and maintenance

- To clean the cabinet, unplug the unit and wipe off dust and stains with a soft cloth moistened with a mild soap and water solution only. Do not use benzene, thinner or similar chemicals to clean the cabinet.

- Do not place naked flame sources, such as lighted candles on the apparatus.
- Take attention to the environmental aspects of battery disposal.
- Use the apparatus only in moderate climates (not in tropical climates).

If at any time in the future you should need to dispose of this product, please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

DESCRIPTIONS

1. VOLUME /OFF KNOB
2. MODE BUTTON
3. AL ON/OFF BUTTON
4. AL SET BUTTON
5. LIGHT/TIME BUTTON
6. AM/FM BUTTON
7. HOUR BUTTON
8. MIN BUTTON
9. LCD DISPLAY
10. TUNING KNOB
11. MIRROR
12. HANDLE
13. ADJUSTABLE STAND
14. BATTERY DOOR
15. HANGER SLOT
16. Suction cup (an accessory)

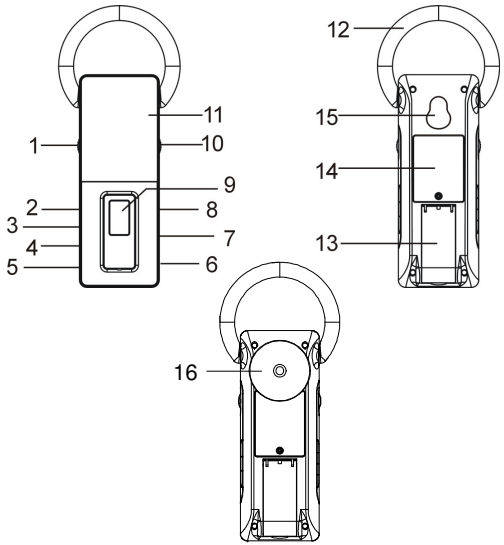

LCD DISPLAY

17. CLOCK TIME
18. ALARM MODE
19. RADIO FREQUENCY DISPLAY
20. RADIO BAND
21. RADIO FREQUENCY UNIT

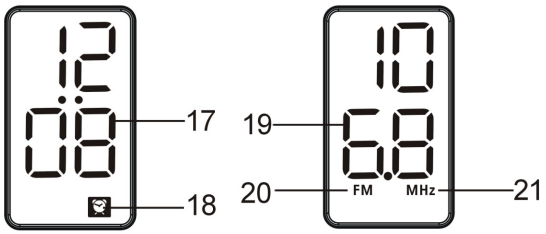

POWER OFF POWER ON

BATTERY INSTALLATION

1. Remove the screw and then the battery door.
2. Insert 4 pcs AAA/ UM4 batteries (not supplied) with polarities (+/-) matching the engraved markings in the battery compartment.
   Reversed batteries may cause damage to the unit.
3. Replace the battery door with the screw.

Precautions of using batteries

1. Use only the size and type of batteries specified.
2. Do not mix different types of batteries together (e.g. alkaline, rechargeable and standard (carbon zinc)) or old batteries with fresh ones.
3. Exhausted batteries have to be removed to prevent possible battery leakage.
4. Dispose of batteries properly according to environmental regulations.

MOUNTING

Using the adjustable stand

The unit can stand on the table at two different angles by pulling out the adjustable stand, which will stop at one of the two clicks with the back cabinet.

Using the handle

Take out the handle and hang it on the hooker mounted securely on the wall.

Using the hanger hole

Hang the unit on the wall using the hanger slot at the back of the unit and the screw on the wall.

Using the suction cup

Insert the suction cup (an accessory) to the hanger slot and press the suction cup firmly against the wall.

TIME SETTING

Set the clock

1. With batteries inserted and **VOLUME/OFF** knob set at OFF position, press and hold **LIGHT/TIME** button and press **HOUR** button to set the hour.
2. Press and hold **LIGHT/TIME** button and press **MIN** button to set the minute.

Set the alarm time

Follow the steps in "**Set the clock**" except using the **AL SET** button, instead of **LIGHT/TIME** button.

Note: When the batteries are removed, the clock and alarm times are back up for 30 seconds to allow you to replace new batteries.

ALARM OPERATION

The unit allows you to wake up by buzzer.

1. Set **VOLUME/OFF** knob at OFF position, press **AL ON/OFF** button to activate the alarm function. The ALARM icon is displayed.
2. When preset alarm time reaches, the alarm buzzer will be on.
3. Press **AL ON/OFF** button to stop the alarm or the alarm will stop after 3 minutes. It will alarm again the next day.
4. To cancel the alarm function, press **AL ON/OFF** button.

*Note: To view the alarm time, press **AL SET** button.*

RADIO OPERATION

Listen to FM/AM radio

1. Turn VOLUME/OFF knob to turn on the unit. The radio frequency will be displayed. You can view the clock time by pressing MODE button. After releasing the button, it will return to the frequency display.
2. To select the band FM or AM, press AM/FM button.
3. Turn the TUNING knob to receive a station.
4. Adjust sound volume level by turning VOLUME/OFF knob.
5. To turn off the radio, turn VOLUME/OFF knob to OFF position when a click sound is heard.

Note: Both FM and AM antennas are built in the unit. To achieve optimum reception, try to orientate or re-locate the unit.

OTHER FUNCTIONS

SPLASH PROOF

The unit is designed for splash proof to the shower. But do not immerse it into the water.

BACKLIGHT

Press **LIGHT/TIME** button to turn on the display backlight for few seconds.

MIRROR

You can glance at yourself in the mirror.

TECHNICAL SPECIFICATIONS

Radio

Tuning range	FM 87.5 – 108 MHz AM 520 – 1600 kHz
Antennas	FM wire antenna and AM bar built in the unit

General

Output power	400 mW
Speaker	40mm 8 Ohm
Power source	DC 6V: batteries 4 x AAA/ UM4 (not supplied)
Dimension	200 (H) x 75 (W) x 40 (D)
Weight	0.25 Kg

Note: Due to continuing improvements, the technical specifications are subject to change without notice.